

KORG

KROSS Music Workstation

How to Load Bonus Sound Libraries

Step 1 – Preparing the Media for Transfer to the KROSS

*Use an SD Card or SDHC Card to transfer the Program data from your PC to the KROSS.

You will need a minimum of 12MB of free memory space, AFTER formatting.

Procedure to format an SD card:

1. Insert the SD card into the card slot on the KROSS
2. In Media Mode, access the MEDIA > UTILITY page
3. Press the FUNCTION button, to select "Format"
4. Press the OK (MENU) button to execute the formatting procedure

For additional details on this procedure, please refer to the "Formatting an SD card" section in the quick start guide.

Step2 – Copying the Program Data to an SD Card

1. Unzip the bonus data, entitled "KROSS_BONUS.zip" archive, which you downloaded on your PC
2. After you unzip the archive, the folder "KROSS_BONUS" will be created
3. Open this folder; there will be the following 4 "PCG" files
BONUS1.PCG ← this file is for "Expanded Keyboards (Piano, E.Piano, Organ, Drums)"
BONUS2.PCG ← this file is for "Expanded Instruments (Bell, Strings, Brass, Guitar)"
BONUS3.PCG ← this file is for "Expanded Synth (Synth Lead, Synth Pad, Bass)"
BONUS4.PCG ← this file is for "BEST OF TRITON"
4. Copy the 4 PCG files listed above into the following DATA (Folder) directory on your SD Card
KORG (Folder)
 - KROSS (Folder)
 - DATA (Folder)
 - BONUS1. PCG
 - BONUS2. PCG
 - BONUS3. PCG
 - BONUS4. PCG

***Note:**

If the PCG data listed above isn't put into the aforementioned data (folder), the KROSS may not correctly recognize the data. It's important to make sure that the PCG data is installed in the correct location.

Step 3 – Locating the Data on the SD Card (The following steps take place on the KROSS)

1. Insert the SD Card mentioned in Step 1 into the card slot on the KROSS, and turn on the power to the KROSS.
2. Press the GLOBAL/MEDIA button, to enter the "GLOBAL/MEDIA" mode
3. Press the MENU button
4. Access the "MEDIA > FILE" page
5. Press the OK (MENU) button.
6. The "MEDIA>FILE" Page will be shown on the display

As a shortcut, in Step3, you can move directly to the FILE page by holding down the "EXIT" button and pressing the GLOBAL/MEDIA button

Step 4 – Loading the Data

The PCG file names which you copied in Step 2 will be shown on the display.

1. For example, select "BONUS1.PCG."
2. Press ">" button, to select the programs
3. Press ">" button again
4. Press "v" button, to select "Bank U"
5. Press the FUNCTION button, to select "Load Selected"
6. Press the OK (MENU) button again
7. LOAD PROGRAM BANK U will be shown on the display
8. Press the OK (MENU) button

The data will be loaded.

Using the same process, please load "BONUS2.PCG", "BONUS3.PCG" and "BONUS4.PCG".

Checking the Sounds

1. Press the PROGRAM button, to enter "PROGRAM" mode
2. Select "USER" with the CATEGORY Knob

Now you can take full advantage of the Bonus Sound Libraries!

Note

- *Only one PCG file can be loaded at a time**
- *Before you load these PCG files, make sure that you don't mind losing any of the data that is currently on your KROSS. Please save any important data onto an SD card in advance.**
- *In Step 4, if you select "BONUS1. PCG." and load the PCG data, all preload data including Program, Combination, DrumKit, Arpeggiator pattern, and Global data will be overwritten. Similarly, if you select "BONUS1.PCG" and "Program", then, load the PCG data, all preloaded programs will be overwritten. So, if you stored your original programs in banks A-D, those Programs will be replaced. Please be sure that you back-up any important data on your KROSS before installing this Bonus Sound Library.**